



WMB Backpack Advertising Machine Instructions

Precautions

Thank you for choosing our backpack advertising machine. Please check whether the accessories are complete when unpacking. To ensure your safety and correct use of the advertising machine, please read the instruction manual carefully before connecting the components and turning on the power, and please keep the manual for future reference. Users are not allowed to disassemble or change this product without authorization, and all consequences will be borne by the user.

1. Please keep this manual properly
2. Please follow all warnings and instructions
3. Please install this product according to the instructions
4. Please turn off the computer before inserting or removing the memory card.
5. The power supply of the advertising machine must be reliably and correctly grounded;
6. Do not block the ventilation and heat dissipation holes and audio sound holes of the machine;
7. When cleaning the LCD screen of the machine, do not use spray directly and turn off the machine;
8. If the machine is not in use for a long time, please unplug the power supply;
9. Do not place the advertising machine near a radiator or other heat source equipment;
10. The power supply on the socket cannot be overloaded to prevent electric shock or fire;
11. Make sure the power socket is near the advertising machine, which is more convenient to use;
12. When cleaning the advertising machine, please unplug the power cord first and make sure the machine is powered off;
13. Please read the instructions carefully before inserting the TF card/U disk to avoid damaging the machine;
14. Do not expose the product to rain or sunlight to avoid affecting normal use;
15. Do not squeeze the power cord, especially the power plug and the connection between the power cord and the product;
16. Do not disassemble or repair the equipment by yourself to prevent high

voltage electric shock or other dangers;

17. When plugging or unplugging all cables, be sure to cut off the power supply of all related equipment and prohibit live work;

18. The power plug should be fully inserted into the socket. If it is not fully inserted into the socket, it may cause fire due to heat;

19. The power switch of the advertising machine should be placed out of the reach of children to prevent children from touching the power switch and causing danger;

20. All descriptions of the advertising machine in this manual are pictures and texts, which may be different from the actual product. Please refer to the actual product. We apologize for any inconvenience caused. Thank you!



In thunderstorm weather, please turn off the power switch, otherwise lightning may damage the advertising machine or cause an accident; do not sprinkle water or other liquids on the machine, and do not use corrosive agents to wipe the machine itself;

The operating or storage temperature of the machine is 0-55 degrees. Do not store or use it in an extremely high or low temperature environment.

Features

1. This product uses a 32-inch IPS LCD display .
2. Support high-definition display images .
3. Support remote and real-time update and release of programs.
4. Supports mobile phone information publishing, convenient and quick software operation.
5. Supports customized advertising content .

6. Supports unified cloud management of devices.
7. A large-capacity backpack can hold more items .
8. The backpack has an external USB port, which makes operation more convenient.
9. Equipped with a large-capacity battery to extend the device's playback time
10. Optional camera

Specifications

System	CPU	Quad-core CA53, up to 1.4GHz
	GPU	ARM G31MP2
	RAM	2GB (optional 4G)
	Internal memory	32GB (64G optional)
	Operating system	Android 11
display	LCD screen	32"LCD HD screen
	Resolution	1080*1920
	Contrast	1000:1
	Refresh frequency	60HZ
	luminance	500/1000(option)
	Screen scale	.16:9
network	WiFi	802.11b/g/n
	Ethernet	100M network port
port	T-flash card	TF card,(support up to 32GB)
	USB	One USB-3.0 HOST and one USB2.0 OTG
	Power port	DC power input
Media playback	Video format	MPEG-1,MPEG-2,MPEG-4,H.263,H.264,VC1,RV etc.,support up to 1080p
	Audio format	MP3,WMAWAV,APE FLAC, AAC, OGG,M4A,3GPP format
	Picture format	
other	megaphone	8*3W
	OSD language	English and other words OSD operation

	Operating temperature	0—40degrees
Information release	Cloud management	support
	Mobile phone release	Support (requires the phone and the machine to be on the same LAN)
	Intelligent split screen	support
	Custom programming	support
	Usb flash drive playback	support
	Commercial break	support
	Timing switch	support
Attachments	Mouse	Wireless mouse
	Remote control unit	Remote control unit
	specification	specification
	Warranty card	Warranty card
	Combined evidence	Combined evidence
	adapter	Power adapter 12V/3A
	battery	12V, 8000 mah (support for 1 hours of playback)
		12V. 10000 mah (support 2-3 hours of playback)
		12V. 20000 mah (supports 4-5 hours of playback)
		12V, 30000 mah (support for 6-7 hours of playback)

Product Dimensions

Device-side function introduction

 
1. Screen control installation

Users can scan the QR code to download. Download from our official website.



2. Wi-Fi connection

Open "Screen Control", select the "Device" module, click "Find Device", and then connect to the corresponding Wi-Fi hotspot. As shown below

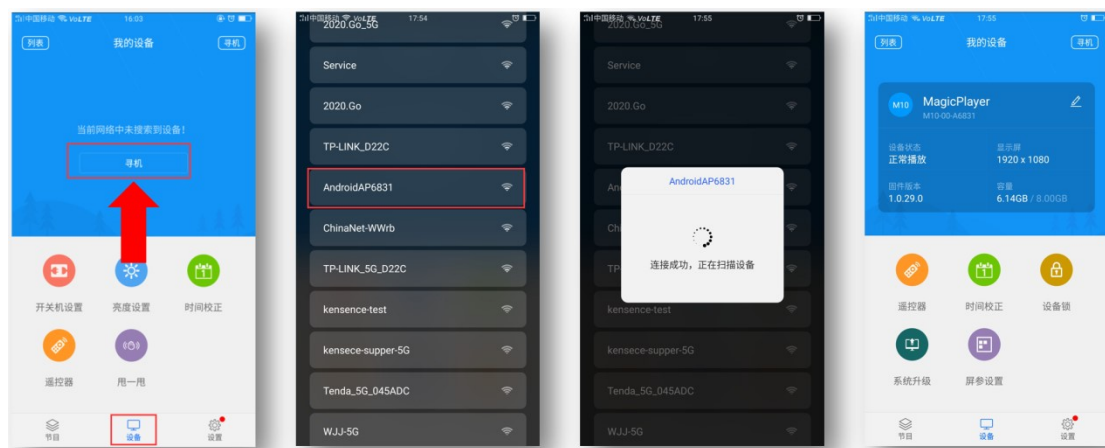


You can also connect to a Wi-Fi hotspot in the WLAN of the "Settings" of your phone.



3. Create a new program

 Select the "Program" module, click "New Display Screen", automatically search for online controllers, select a controller, read back the screen size of the controller by default, and click "OK".

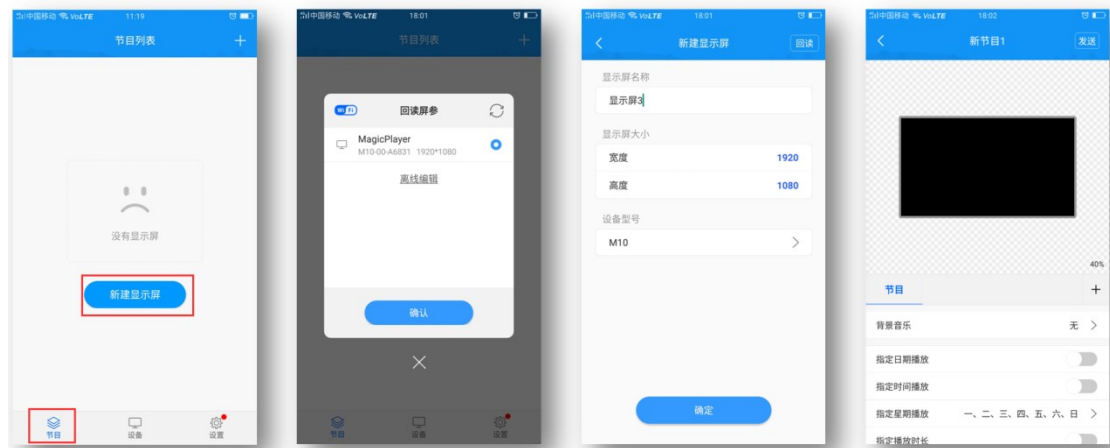

If there is no online controller, you can edit it offline and customize the screen width and height.

4. Add Video

After entering the program editing interface, click the "+" on the right to add a video area, then expand the video area in the simulation display area, and then click the "+" below to add multiple videos. The videos will be played in a loop.



4.1 . Add pictures

Similar to the video, click the "+" on the right to add a picture area, then enlarge the picture area in the simulation display area, and then click the "+" below to add multiple pictures. The pictures will be played in a loop.



After adding pictures, you can modify the picture display duration, animation effects, and display effects at the bottom of the picture list.

5. Program broadcast control settings

Select "Program" on the left side of the program editing interface, and you can set the background music, play date, play time, play week and play duration of the program below.



6. Program transmission

 
1) Single program transmission

After editing the program, click "Send" in the upper right corner to send the program.



2) Multi-program transmission

Exit the program interface and return to the program list, where you can add and send multiple programs.

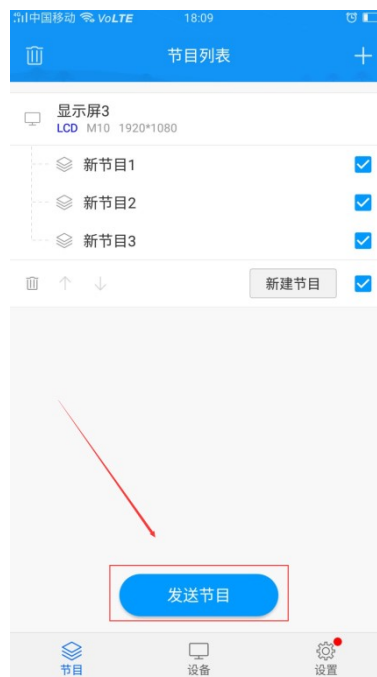

A360

Micro Digital

Digital Solutions for People, Places and Possibilities

User Guide

Business in a Parcel

Your portable digital advertising business starts here.

- ✓ Simple set up
- ✓ Step-by-step instructions
- ✓ Ready to go




PLUG
Everything you need in one parcel


PLAY
Show your message anywhere


PROMOTE
Grow your business locally


SUPPORT
We're here to help



Ideal for small businesses, charities, community groups and organisations



 
Perfect for events, high streets, travel hubs and local campaigns



Portable digital billboards in 21.5", 27" or 32" options



Reusable, eco-conscious and cost-effective

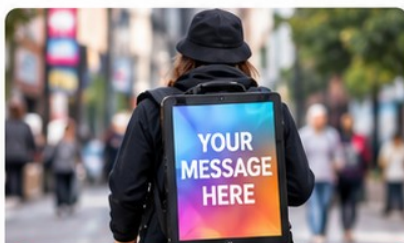

Take your message to the streets



Simple set up
Step-by-step guide inside



Be seen everywhere



Secure.



Inclusive.



Ethical.



Built for your success.

Home of UK Micro, Meso and Macro Digital — hyperlocal solutions, mobile-first innovation and wearable media systems.